



ASSEMBLY INSTRUCTION

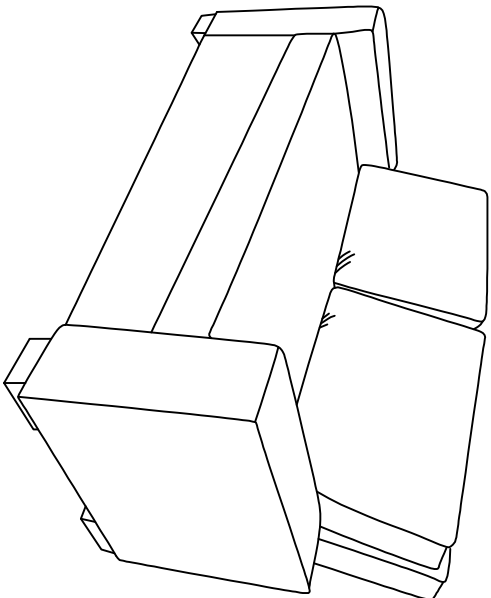


ASSEMBLY INSTRUCTIONS

Step 1

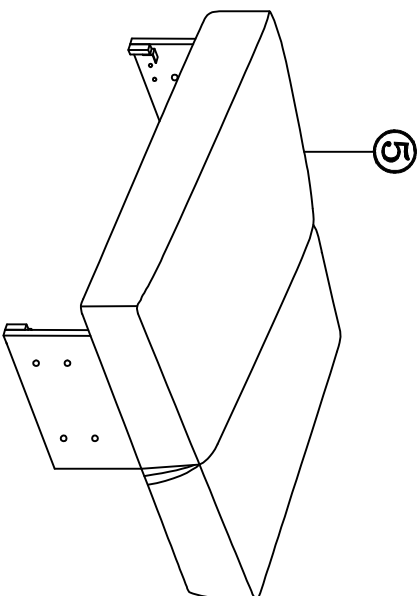


PARTS AND HARDWARE

Note: Individual parts are not shown to scale.

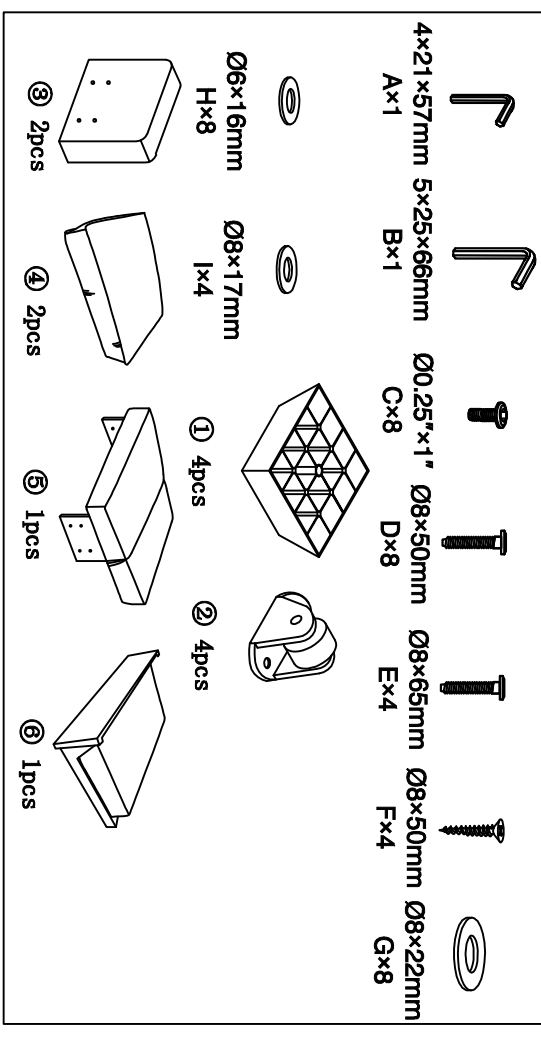


Step 2

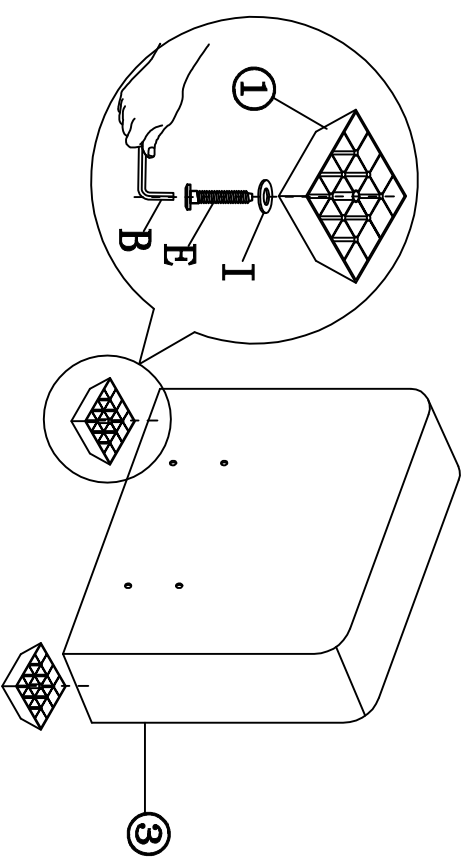


OPERATING YOUR UNIT


Step 3

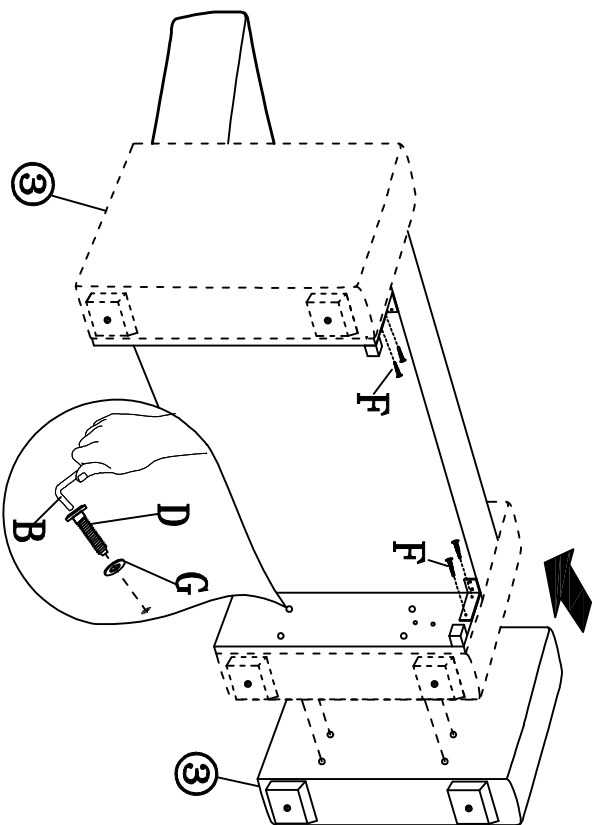


Step 4

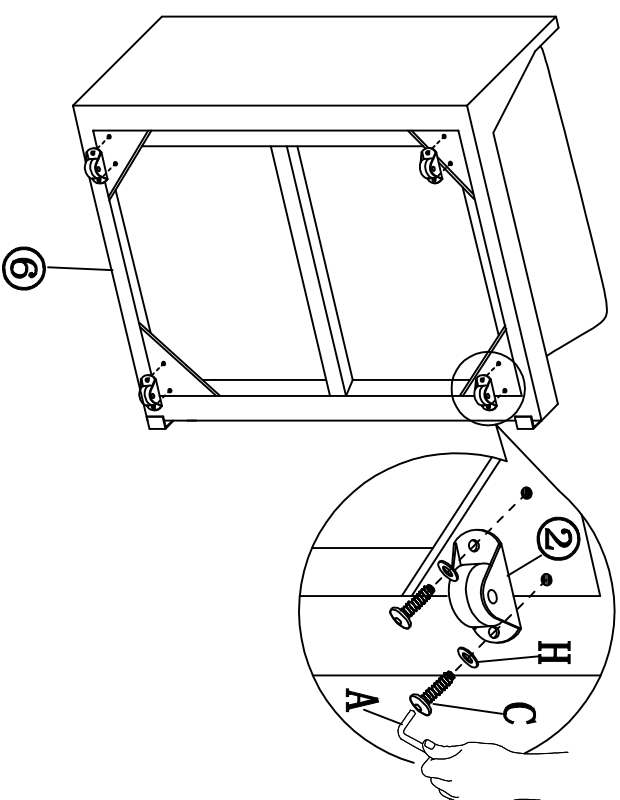

Step 5

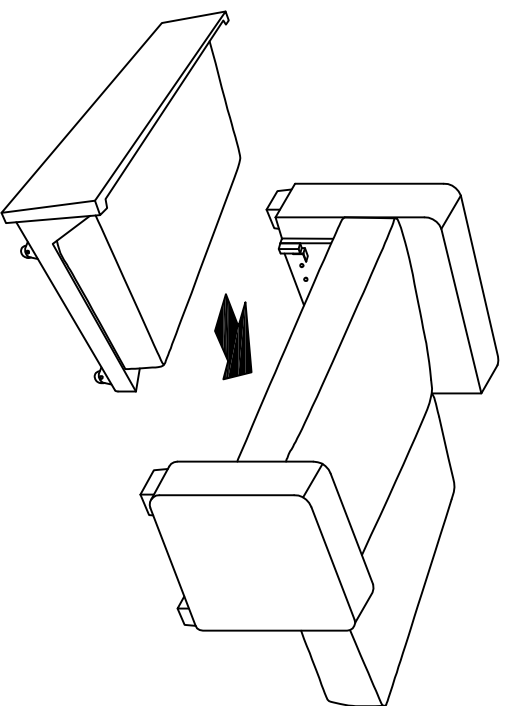


Step 6

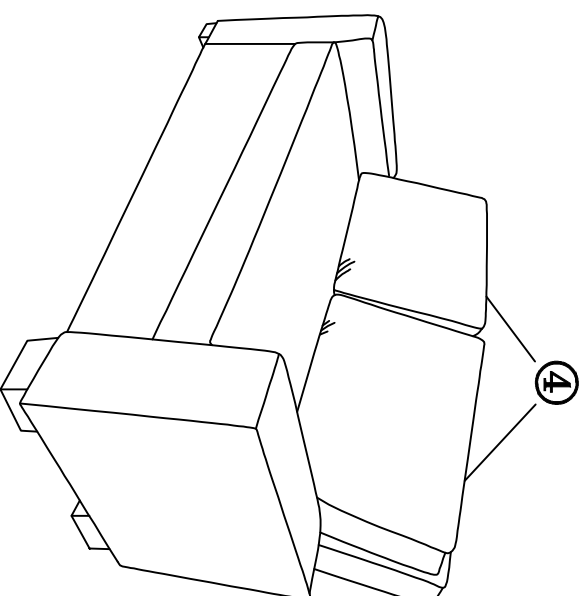


OPERATING YOUR UNIT


Step 7

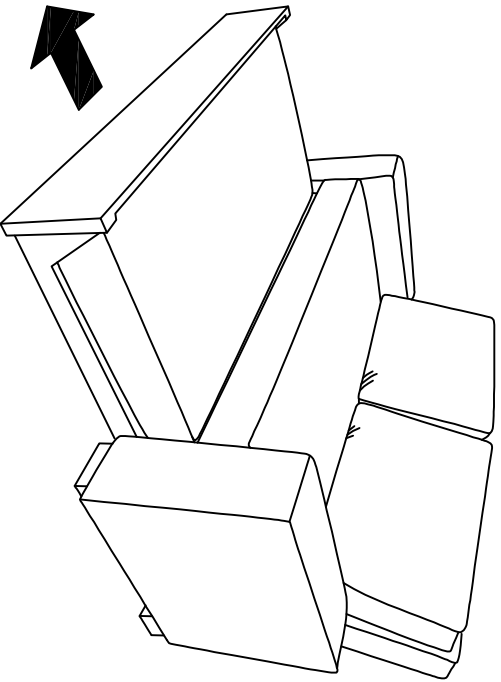

Step 8

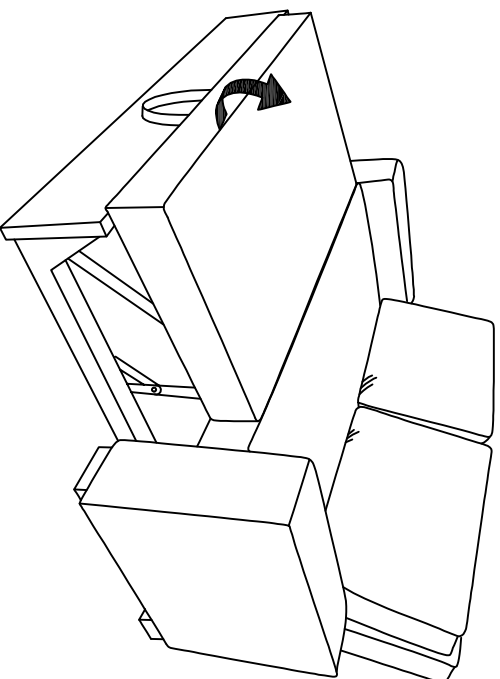

Step 9

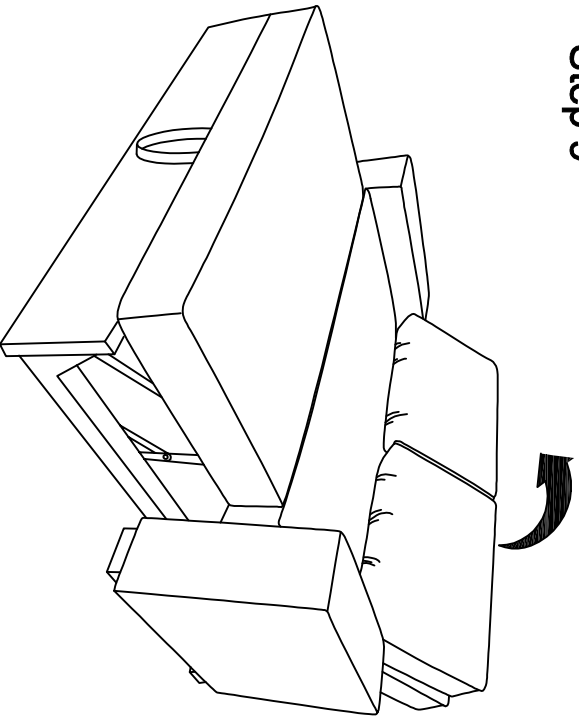

Step 10

