


# Terrassebrædder Manual

workmann

1. Du skal benytte en boremaskine, elektrisk skruetrækker og en skæremaskine, udover de dele som allerede følger med.
2. Sørg for, at jorden er jævn og solid nok til at holde ekspansionsskruer.
3. Forbor gulvbjælkerne til ekspansionsskruer, sørg for, at hullernes placering på gulvbjælkerne er gulvet er afstemt.

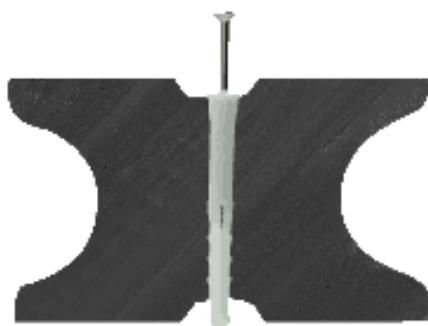

Trin 1




Mellemrummet med  
gulvbjælkerne er anbefalet til at  
være 30 cm.  
Hold ekspansionsskruer til  
bjælkelag omkring 30 cm fra  
hinanden

Trin 2



Sæt startklemmen for enden af hver  
bjælke med en rustfri stålskrue.

Trin 3

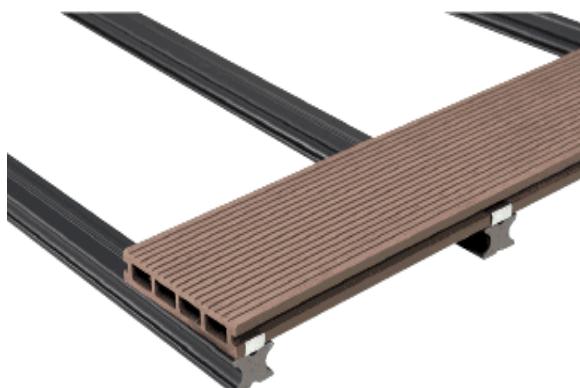

Skub det første terrassebræt fast mod  
startklemmen

Trin 4




Monter afstandsclips på den anden side af brættet, og fastgør dem  
derefter med skruer. Sørg for, at skruehullerne flugter med midten af  
gulvbjælkerne.

Trin 5



Skub terrassebrædder mod  
afstandsclips og installer brædderne på  
samme måde som trin 5

Trin 6

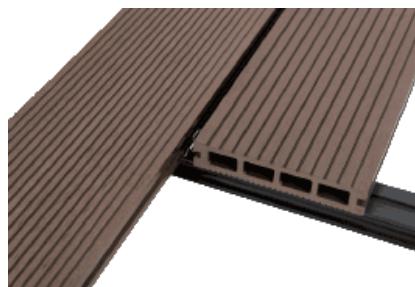

Stykkerne i midten skal installeres  
over gulvbjælkerne, eller for at  
tilføje en ekstra bjælke for at lette  
installationen.

Trin 7




Træk skruen for enden af det sidste stykke for  
at fastgøre det sidste stykke  
Skær sidedækslets ende diagonalt for at få  
dem til at passe til hinanden  
Træk skruer på toppen af sidedækslet for at  
fastgøre dem

Trin 8

# WPC Decking Install User Manual

1. You will need a drilling machine,an electronic screw driver and a cutting machine except for all the accessories we offered before you start installing decking!
2. Make sure the ground is level / stable and solid enough to hold expansion screws.
- 3.Predrill joists/ground before driving expansion screws ,please make sure the holes' locations on joists and ground are matched!

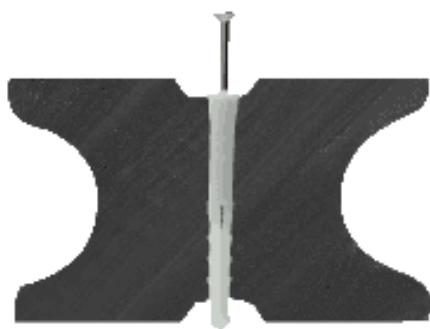

Step 1



The space between two joists is recommended as 30cm  
Keep Expansion screws for joist around 30cm apart


Step 2

Top View



Set starter clip at the end of each joist with a stainless steel screw.

Step 3

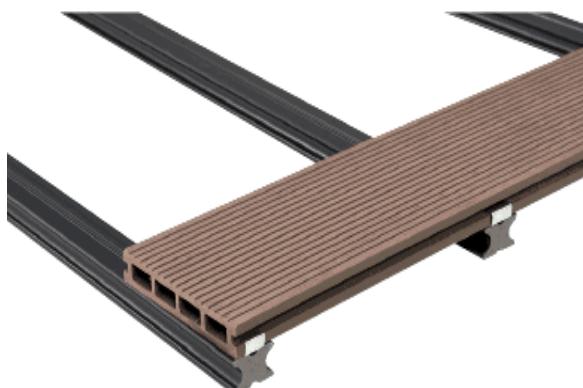

Slip the first decking board against the starter clip firmly

Step 4




Install spacer clips to the other side of the board,then fix them with screws  
Make sure the screw holes lining up with the center of joists

Step 5



Slip decking boards against spacer clips and install the boards in the same way as step5

Step 6

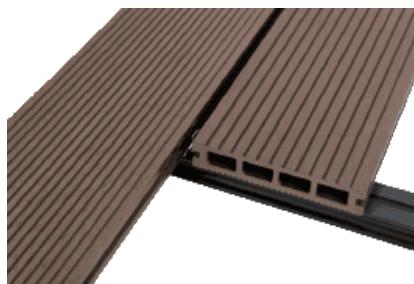

The pieces in the middle should be installed over the joists,or to add an extra joist for the convenience of installation.

Step 7



Drive screw at the end of the last piece of decking to fix the last piece  
Cut side cover's end diagonally to make them match to each other  
Drive screws on the top of the side cover to fix them job is done

Step 8